

FORSTER PRODUCTS

310 E. LANARK AVENUE, LANARK, ILLINOIS 61046 PHONE 815-493-6360 (FAX 815-493-2371)

www.forsterproducts.com

POWER ADAPTER INSTRUCTIONS

This simple-to-use device screws onto the cutter shaft of your Forster Case Trimmer in place of the hand crank. The adapter functions best with a cordless screwdriver that has an RPM of 140 or higher. It also may be used with a small power drill. If using a power drill, it must be supported so that all of its weight is not on your Trimmer cutter shaft.

Begin by removing the crank handle assembly from your Trimmer cutter shaft. The crank screws off in a counterclockwise direction. Attach the power adapter to the Case Trimmer cutter shaft. Simply fit the 1/4" female end of the hand held screwdriver onto the Power Adapter. Refer to your Case Trimmer instructions to adjust for proper trimming length. Next, squeeze the trigger on the motor and push lightly inward against the case mouth to trim to length.



WARNING — Always wear safety glasses during reloading operations. Occasionally lubricate the cutter shaft with light machine oil. **Power use will cause more wear on the Trimmer's shaft and bearing.**

**Thank you for purchasing a Forster Precision Product.
Please wear safety glasses.**

Forster Catalogs are available upon request.

PA1000-001 Rev. 1